


FA HPSU monobloc compact • 10/2018


Kap. 4.5.14

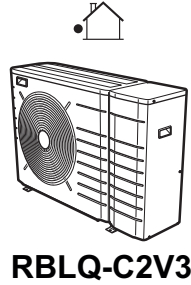

- >DE< So schließen Sie die Hauptstromversorgung an
- >EN< To connect the main power supply
- >Fi< Päävirransyötön liittäminen
- >PT< Para ligar a fonte de alimentação principal
- >EL< Για να συνδέσετε τα καλώδια της κεντρικής τροφοδοσίας
- >RO< Pentru a conecta rețeaua de alimentare principală


I

- >DE< Bei Normaltarif-Netzanschluss
- >EN< In case of normal kWh rate power supply
- >Fi< Normaalin kWh-taksan virransyöttö
- >PT< Em caso de fonte de alimentação no tarifário normal por kWh
- >EL< Σε περίπτωση τροφοδοσίας με κανονική χρέωση
- >RO< În cazul alimentării de la o rețea cu tarif kWh normal

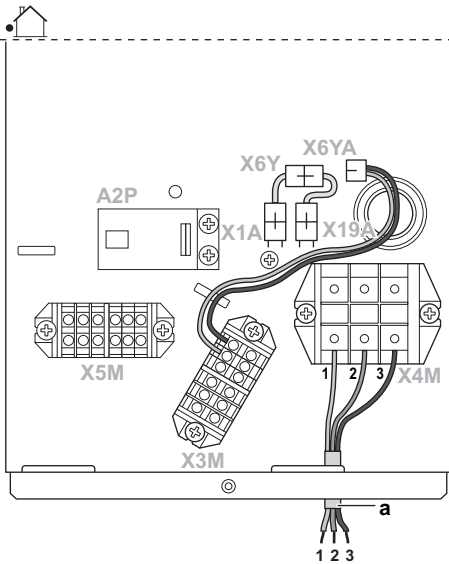


II

- >DE< Bei Wärmepumpentarif-Netzanschluss
- >EN< In case of preferential kWh rate power supply
- >Fi< Toivotun kWh-taksan virransyöttö
- >PT< Em caso de fonte de alimentação na taxa kWh bonificada
- >EL< Σε περίπτωση τροφοδοσίας με μειωμένη χρέωση
- >RO< În cazul alimentării de la o rețea cu tarif kWh preferențial

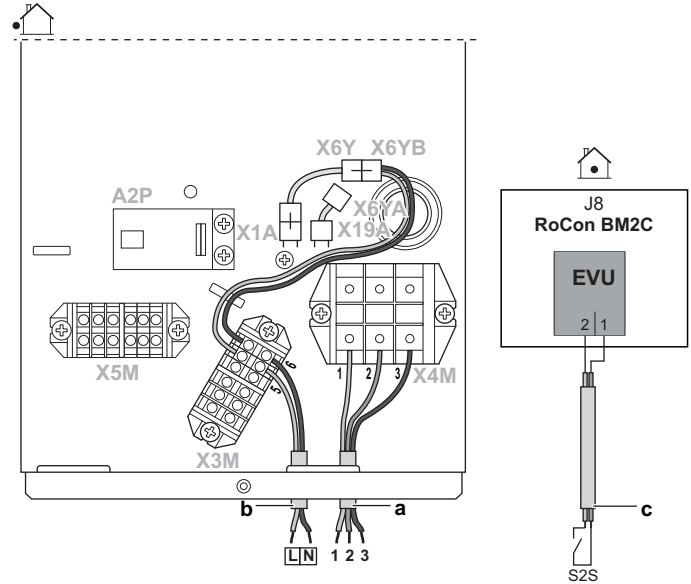


	>DE<	>EN<	>Fi<	>PT<	>EL<	>RO<
a	Verbindungskabel (=Hauptstromversorgung)	Interconnection cable (=main power supply)	Yhteiskytentäjohto (=Päävirransyötön)	Cabo de interligação (= fonte de alimentação principal)	Καλώδιο διασύνδεσης (=ΚΕΝΤΡΙΚΗ τροφοδοσία)	Cablu de interconectare (=rețea de alimentare principală)
b	Normaltarif-Netzanschluss	Normal kWh rate power supply	Normaalin kWh-taksan virransyöttö	Fonte de alimentação com tarifário normal por kWh	Τροφοδοσία με κανονική χρέωση	Rețea de alimentare cu tarif kWh normal
c	Kontakt für Wärmepumpentarif-Netzanschluss (am Steuerungskasten)	Preferential power supply contact (on the control box)	Toivotun virransyötön kosketin (säätöasiassa)	Contacto preferencial da alimentação elétrica (na caixa de controlo)	Επαφή τροφοδοσίας με μειωμένη χρέωση (στο κιβώτιο ελέγχου)	Contact rețea de alimentare preferențială (pe cutia de comandă)
1	GND					
2	L					
3	N					

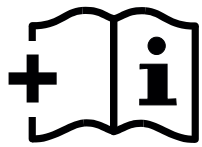

FA HPSU monobloc compact • 10/2018

Kap. 4.5.14

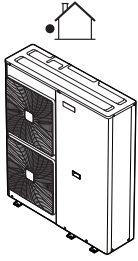


RBLQ-CW1

- >DE< So schließen Sie die Hauptstromversorgung an
- >EN< To connect the main power supply
- >Fi< Päävirransyötön liittäminen
- >PT< Para ligar a fonte de alimentação principal
- >EL< Για να συνδέσετε τα καλώδια της κεντρικής τροφοδοσίας
- >RO< Pentru a conecta rețeaua de alimentare principală


I

- >DE< Bei Normaltarif-Netzanschluss
- >EN< In case of normal kWh rate power supply
- >Fi< Normaalin kWh-taksan virransyöttö
- >PT< Em caso de fonte de alimentação no tarifário normal por kWh
- >EL< Σε περίπτωση τροφοδοσίας με κανονική χρέωση
- >RO< În cazul alimentării de la o rețea cu tarif kWh normal

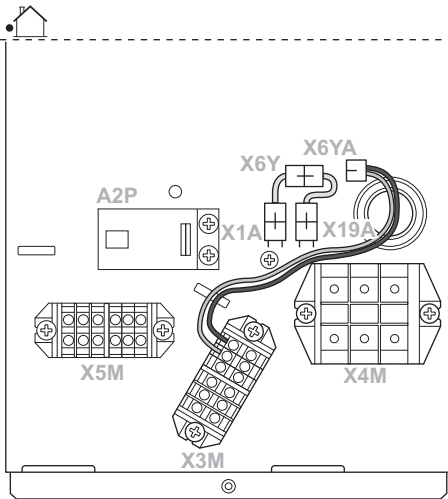

II

- >DE< Bei Wärmepumpentarif-Netzanschluss
- >EN< In case of preferential kWh rate power supply
- >Fi< Toivotun kWh-taksan virransyöttö
- >PT< Em caso de fonte de alimentação na taxa kWh bonificada
- >EL< Σε περίπτωση τροφοδοσίας με μειωμένη χρέωση
- >RO< În cazul alimentării de la o rețea cu tarif kWh preferențial

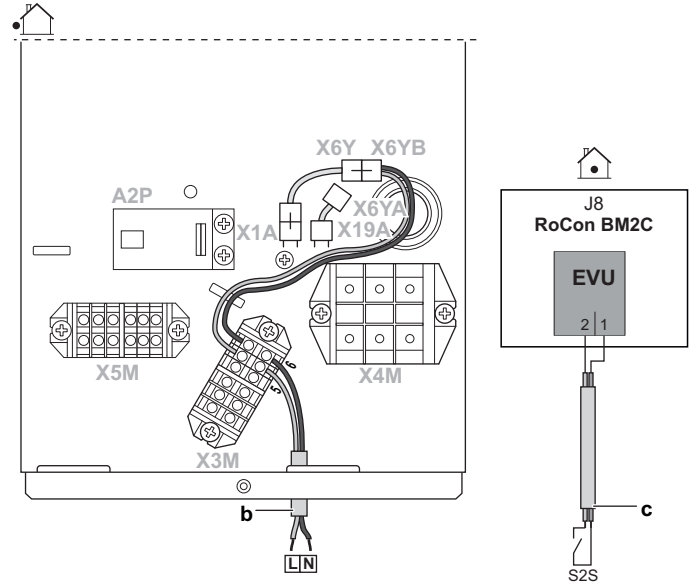

	>DE<	>EN<	>Fi<	>PT<	>EL<	>RO<
b	Normaltarif-Netzanschluss	Normal kWh rate power supply	Normaalin kWh-taksan virransyöttö	Fonte de alimentação com tarifário normal por kWh	Τροφοδοσία με κανονική χρέωση	Rețea de alimentare cu tarif kWh normal
c	Kontakt für Wärmepumpentarif-Netzanschluss (am Steuerungskasten)	Preferential power supply contact (on the control box)	Toivotun virransyötön kosketin (säätöasiassa)	Contacto preferencial da alimentação elétrica (na caixa de controlo)	Επαφή τροφοδοσίας με μειωμένη χρέωση (στο κιβώτιο ελέγχου)	Contact rețea de alimentare preferențială (pe cutia de comandă)
1	GND					
2	L					
3	N					